




Kneeboard Kit / X-naut Mini Installation Instructions

Tools Needed: Phillips Screwdriver

Hardware: (3) 8-32 Screws (3) 8-32 Nuts

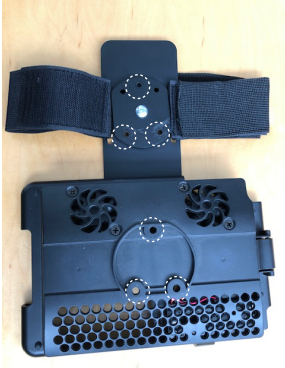

3-hole pattern on the kneeboard plate will be used for X-naut Mini ONLY.
4 hole pattern is designed for larger X-naut models.



Begin by aligning the bottom two holes of the kneeboard plate with the 2 holes of the X-naut mini. Insert the 8-32 mounting screws.



Turn over and fasten screws with 8-32 nuts.



Rotate kneeboard plate to align top hole.
Insert 8-32 screw, turn over and fasten with 8-32 nut.